



PRODUCT NOTIFICATION:

**TOPIC:** GROUND SCREW WARNING NOTIFICATION

EFFECTIVE: 1/2020

Product is subject to possible loss of connection to Earth ground should the Earth-bonding screw become loosened. Users of product should take great care not to attempt to loosen or remove this screw, otherwise product ceases to comply to safety standards. Connection to Earth ground is essential to prevent any possibility of fire or shock in the case of damage to the product's chassis or internal components. The Grounding screw is circled in red in each of the pictures.

For Magnitude magnetic drivers 96 watts and below the screw is located on the right side of the driver.



For Magnitude drivers 100 watts and above the grounding screw is located on the bottom of the driver.



For additional information or questions contact **Magnitude Technical Support** at **714-312-5080**.